

阅读申明


- 1.本站收集的数据手册和产品资料都来自互联网，版权归原作者所有。如读者和版权方有任何异议请及时告之，我们将妥善解决。
- 2.本站提供的中文数据手册是英文数据手册的中文翻译，其目的是协助用户阅读，该译文无法自动跟随原稿更新，同时也可能存在翻译上的不当。建议读者以英文原稿为参考以便获得更精准的信息。
- 3.本站提供的产品资料，来自厂商的技术支持或者使用者的心得体会等，其内容可能存在描述上的差异，建议读者做出适当判断。
- 4.如需与我们联系，请发邮件到marketing@iczoom.com，主题请标有“数据手册”字样。

Read Statement

1. The datasheets and other product information on the site are all from network reference or other public materials, and the copyright belongs to the original author and original published source. If readers and copyright owners have any objections, please contact us and we will deal with it in a timely manner.
2. The Chinese datasheets provided on the website is a Chinese translation of the English datasheets. Its purpose is for reader's learning exchange only and do not involve commercial purposes. The translation cannot be automatically updated with the original manuscript, and there may also be improper translations. Readers are advised to use the English manuscript as a reference for more accurate information.
3. All product information provided on the website refer to solutions from manufacturers' technical support or users the contents may have differences in description, and readers are advised to take the original article as the standard.
4. If you have any questions, please contact us at marketing@iczoom.com and mark the subject with "Datasheets" .

**Superbright Red GMX7275C
Superbright Red GMX7275CA**

PACKAGE DIMENSIONS

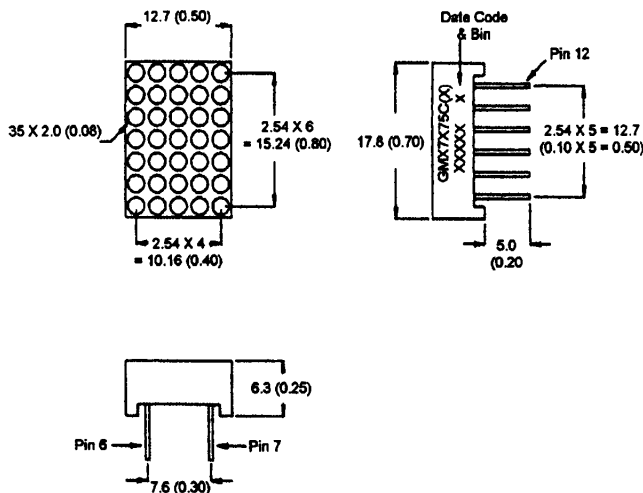

DESCRIPTION

The GMX7275C(X) a 5 X 7, Superbright red dotmatrix display. Populated with GaAlAs/GaAs Single Hetero Junction LEDs, it has a grey face with white segment color.

FEATURES

- 0.7" (17.2mm) character height.
- Low power requirement.
- Wide 130° viewing angle.
- High brightness and contrast
- 5 X 7 array with X-Y select.
- X-Y stackable.
- Easy mounting on P.C. board.

NOTE: Dimensions are in mm (inch).
Tolerances are ± 0.25 (0.1) unless otherwise noted.
All pins are 0.5 (.02).

MODEL NUMBERS

<u>Part Number</u>	<u>Colour</u>	<u>Description</u>
GMA7275C	AlGaAs Red	Common anode row.
GMA7275CA	AlGaAs Red	Common anode row, alternate pin-out.
GMC7275C	AlGaAs Red	Common cathode row.
GMC7275CA	AlGaAs Red	Common cathode row, alternate pin-out.

(For other color options, contact your local area Sales Office)

ABSOLUTE MAXIMUM RATING ($T_A = 25^\circ\text{C}$ unless otherwise specified)

	Superbright Red	Units
Peak forward current per segment (Duty cycle 1/10, 10KHz)	200	mA
Continuous IF per segment	30	mA
Power dissipation per segment	100*	mW
*Derate linearly from 25°C	0.5	mW/°C
Reverse voltage VR per segment	5	Volts
Operating and storage temperature range.....	-25°C to +85°C	
Soldering time at 260°C..... (1/16" below seating plane)	3 sec	

ELECTRO - OPTICAL CHARACTERISTICS ($T_A = 25^\circ\text{C}$ unless otherwise specified)

	Superbright Red	Test Condition
Luminous Intensity/Dot Digit average (Typical)	5000ucd	$I_F = 20 \text{ mA}$
Forward voltage (V_F) typical	1.8V	$I_F = 20 \text{ mA}$
maximum	2.5V	$I_F = 20 \text{ mA}$
Peak wavelength (nm)	660nm	$I_F = 20 \text{ mA}$
Spectral line half width (nm)	20nm	$I_F = 20 \text{ mA}$
Reverse breakdown voltage V_R	5V	$I_R = 100 \mu\text{A}$

PIN CONNECTION:


GMX7X75C

GMA7X75C		GMC7X75C	
Pin Number	Function	Pin Number	Function
1	Anode Row 1	1	Cathode Row 1
2	Anode Row 2	2	Cathode Row 2
3	Cathode Column 2	3	Anode Column 2
4	Cathode Column 1	4	Anode Column 1
5	Anode Row 6	5	Cathode Row 6
6	Anode Row 7	6	Cathode Row 7
7	Cathode Column 3	7	Anode Column 3
8	Anode Row 5	8	Cathode Row 5
9	Cathode Column 4	9	Anode Column 4
10	Anode Row 4	10	Cathode Row 4
11	Anode Row 3	11	Cathode Row 3
12	Cathode Column 5	12	Anode Column 5


GMX7X75CA

GMC7X75CA		GMA7X75CA	
Pin Number	Function	Pin Number	Function
1	Anode Column 1	1	Cathode Column 1
2	Cathode Row 3	2	Anode Row 3
3	Anode Column 2	3	Cathode Column 2
4	Cathode Row 5	4	Anode Row 5
5	Cathode Row 6	5	Anode Row 6
6	Cathode Row 7	6	Anode Row 7
7	Anode Column 4	7	Cathode Column 3
8	Anode Column 5	8	Cathode Column 5
9	Cathode Row 4	9	Anode Row 4
10	Anode Column 3	10	Cathode Column 3
11	Cathode Row 2	11	Anode Row 2
12	Cathode Row 1	12	Anode Row 1


SCHEMATICS:

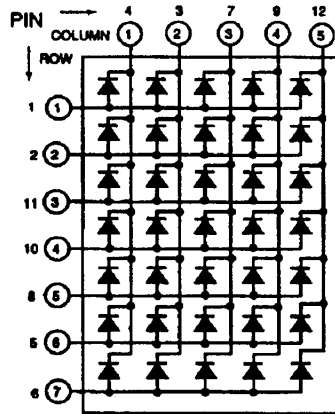


GMA7X75C

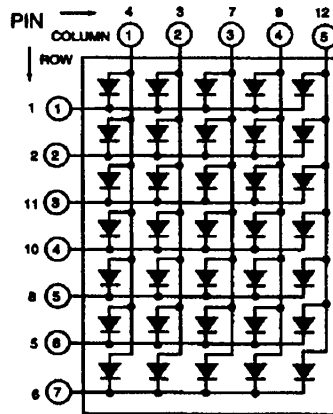

GMC7X75C

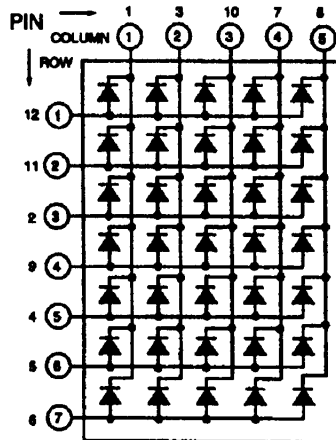

GMA7X75CA

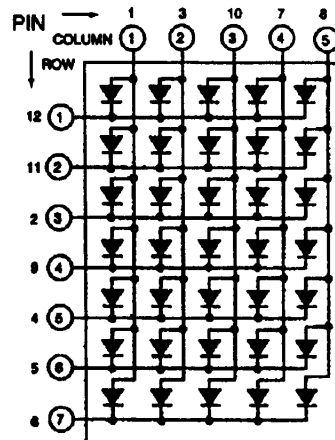

GMC7X75CA

GRAPHICAL DETAIL: AlGaAs Red ($T_A = 25^\circ\text{C}$ unless otherwise specified)

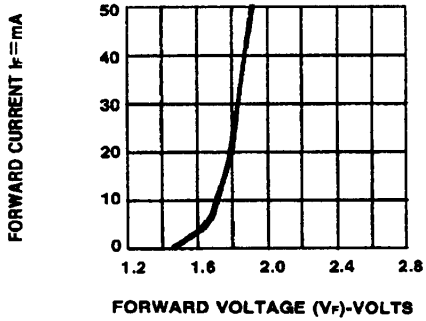


Fig.1 FORWARD CURRENT VS. FORWARD VOLTAGE.

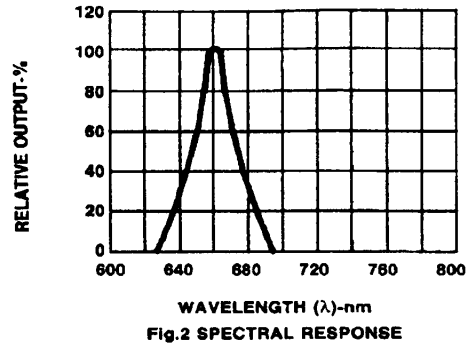


Fig.2 SPECTRAL RESPONSE

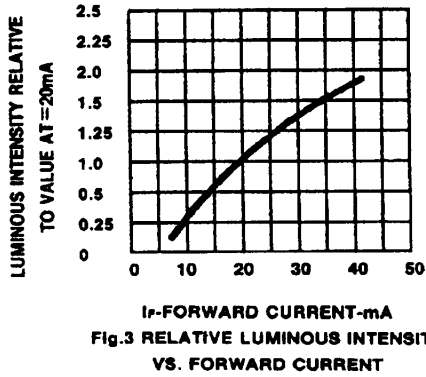


Fig.3 RELATIVE LUMINOUS INTENSITY VS. FORWARD CURRENT

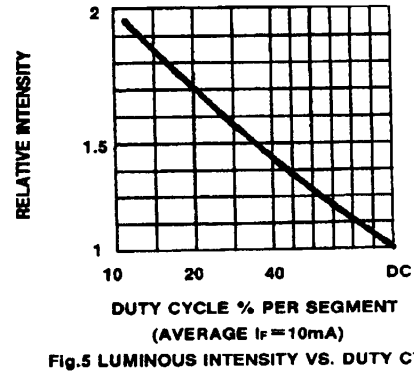


Fig.5 LUMINOUS INTENSITY VS. DUTY CYCLE (AVERAGE I_f = 10mA)

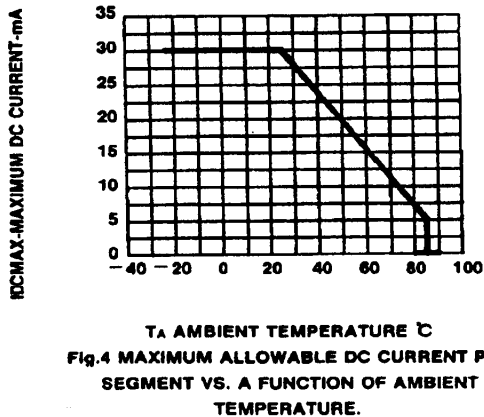


Fig.4 MAXIMUM ALLOWABLE DC CURRENT PER SEGMENT VS. A FUNCTION OF AMBIENT TEMPERATURE.

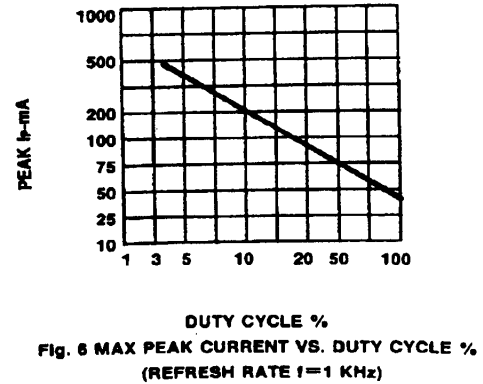


Fig.6 MAX PEAK CURRENT VS. DUTY CYCLE % (REFRESH RATE f = 1 KHz)

The logo consists of two thick red horizontal bars. The top bar is above the word "FAIRCHILD" in a bold, black, sans-serif font. The bottom bar is below "FAIRCHILD" and above "SEMICONDUCTOR™".

FAIRCHILD

SEMICONDUCTOR™

0.7 INCH (17.2mm) 5 X 7 DOT MATRIX STICK DISPLAY

DISCLAIMER

FAIRCHILD SEMICONDUCTOR RESERVES THE RIGHT TO MAKE CHANGES WITHOUT FURTHER NOTICE TO ANY PRODUCTS HEREIN TO IMPROVE RELIABILITY, FUNCTION OR DESIGN. FAIRCHILD DOES NOT ASSUME ANY LIABILITY ARISING OUT OF THE APPLICATION OR USE OF ANY PRODUCT OR CIRCUIT DESCRIBED HEREIN; NEITHER DOES IT CONVEY ANY LICENSE UNDER ITS PATENT RIGHTS, NOR THE RIGHTS OF OTHERS.

LIFE SUPPORT POLICY

FAIRCHILD'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF THE PRESIDENT OF FAIRCHILD SEMICONDUCTOR CORPORATION. As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and (c) whose failure to perform when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury of the user.
2. A critical component in any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.