

阅读申明

- 1.本站收集的数据手册和产品资料都来自互联网，版权归原作者所有。如读者和版权方有任何异议请及时告之，我们将妥善解决。
- 2.本站提供的中文数据手册是英文数据手册的中文翻译，其目的是协助用户阅读，该译文无法自动跟随原稿更新，同时也可能存在翻译上的不当。建议读者以英文原稿为参考以便获得更精准的信息。
- 3.本站提供的产品资料，来自厂商的技术支持或者使用者的心得体会等，其内容可能存在描述上的差异，建议读者做出适当判断。
- 4.如需与我们联系，请发邮件到marketing@iczoom.com，主题请标有“数据手册”字样。

Read Statement

1. The datasheets and other product information on the site are all from network reference or other public materials, and the copyright belongs to the original author and original published source. If readers and copyright owners have any objections, please contact us and we will deal with it in a timely manner.
2. The Chinese datasheets provided on the website is a Chinese translation of the English datasheets. Its purpose is for reader's learning exchange only and do not involve commercial purposes. The translation cannot be automatically updated with the original manuscript, and there may also be improper translations. Readers are advised to use the English manuscript as a reference for more accurate information.
3. All product information provided on the website refer to solutions from manufacturers' technical support or users the contents may have differences in description, and readers are advised to take the original article as the standard.
4. If you have any questions, please contact us at marketing@iczoom.com and mark the subject with "Datasheets" .

Standard Mini Servo (#900-00010)


General Information

The Parallax Mini standard servo is ideal for small robotics and basic movement projects. These servos will allow a movement range of 0 to 180 degrees.




Technical Specifications

- > Power 4.8vdc to 6vdc max
- > Speed 0 deg to 180 deg in .5 seconds on average
- > Weight 26.6 grams/.94oz
- > Torque 2.8 kg-cm/39oz-in
- > Size mm (L x W x H)
40.5x20.0x38.0
- > Size in (L x W x H)
1.38x.67x1.26

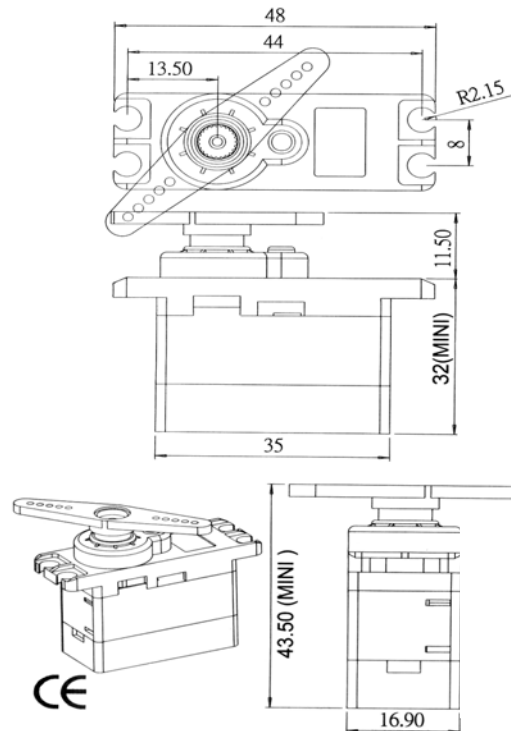

Measurements are in mm

Wiring setup

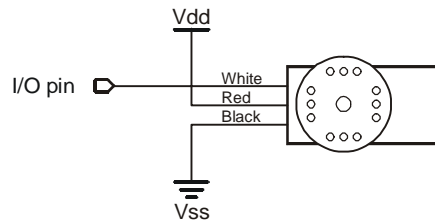

The servo is controlled by pulsing of its signal line. If you are using a Basic Stamp this is done with the `pulsout` command. Below is stamp code that will help you with basic control of a servo. The codes below may not move the servos from on extreme to another but is will give you a general demonstration on function.

'Stamp1

```
symbol temp = w0
start:
  for temp = 70 to 250 step - 1
    pulsout 0,temp
    pause 50
  next
  for temp = 250 to 70
    pulsout 0,temp
    pause 50
  next
goto start
```

'Stamp 2 ,2e,2pe

```
temp VAR Word
start:
  FOR temp = 1200 TO 305
    PULSOUT 0,temp
    PAUSE 20
  NEXT
  FOR temp = 305 TO 1200
    PULSOUT 0,temp
    PAUSE 20
  NEXT
GOTO start
```

'Stamp 2sx,2p24/40

```
temp var word
start:
  for temp = 500 to 3000
    pulsout 0,temp
    pause 50
  next
  for temp = 3000 to 500
    pulsout 0,temp
    pause 50
  next
goto start
```